

# Correct Anode Installation

Correctly installing your Maddox Anode will ensure efficiencies & long term use for corrosion protection.




Waterline




Install a min of 200mm below the waterline

- 1. Star-tooth washer
- 2. Flat locking washer
- 3. Nut

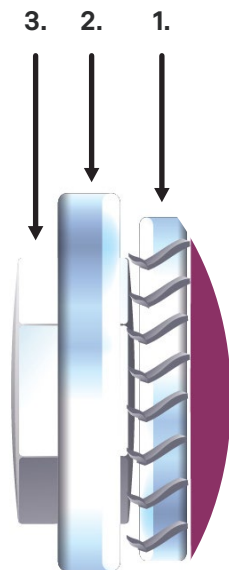

Installation: Side View

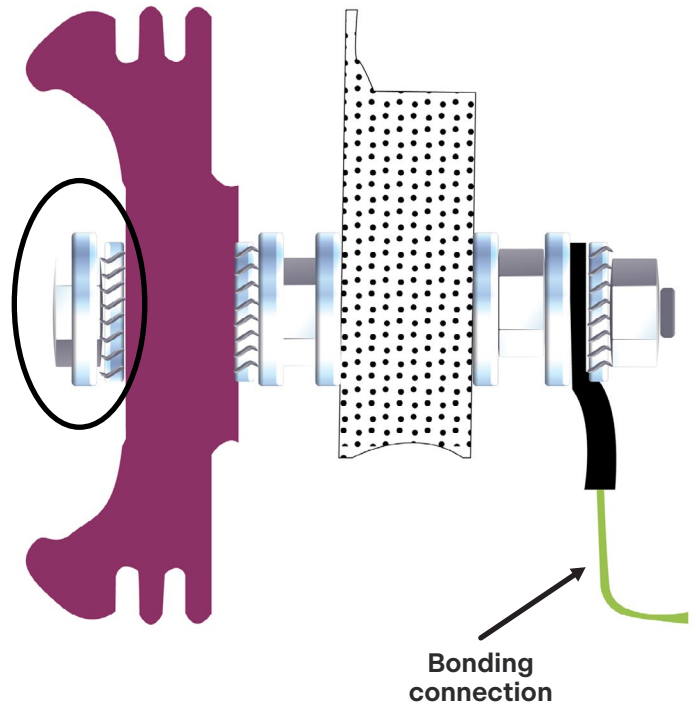


# CORRECT ANODE INSTALLATION

Correctly installed Maddox Anode will ensure efficiencies & long term use for corrosion protection.



Apply grease on all threads

Follow the sequence highlighted below to correctly install your Maddox Anode

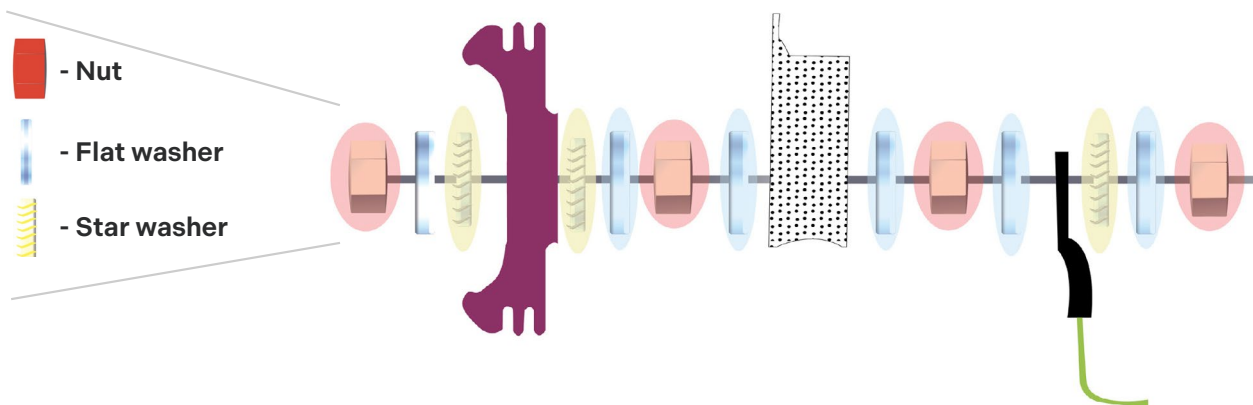

## ENSURE THE FOLLOWING:

- MPS Conductive grease is generously applied on threads and other connections
- All connections are tight and use star washers to improve mechanical and electrical connection
- Maintain connection and confirm integrity (i.e. tight, free from corrosion and protected)
- Maddox installation is a minimum of 200mm under the waterline



This material remains the exclusive property of Marine Protection Systems Pty Ltd and must not be reproduced, replicated, copied or used without the expressed consent of Marine Protection Systems Pty Ltd © 2011

[f @marineprotectionsystems](#)

[@marineprotectionsystems](#)

[info@marineprosystems.com](mailto:info@marineprosystems.com)

CORROSION CONTROL THAT WORKS